

SERVICE TOOLS

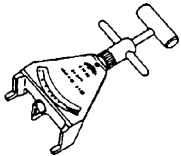
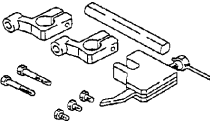

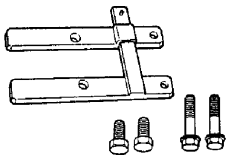
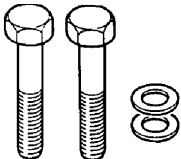
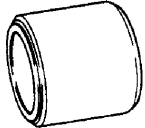
 
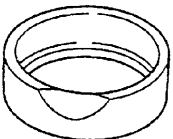
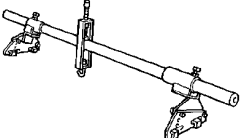
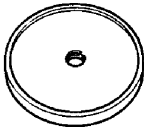
 
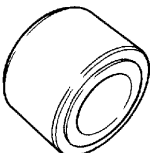
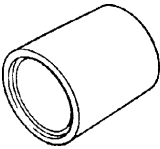
 

 
 
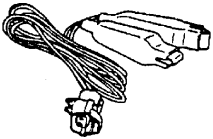
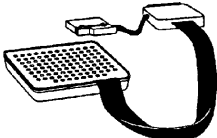
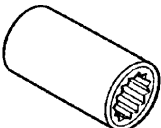
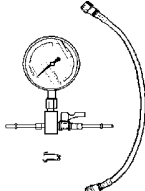
01-60 SERVICE TOOLS

ENGINE SST 01-60-1

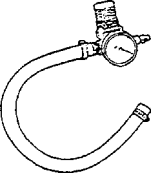
 
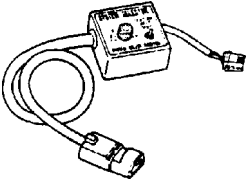
ENGINE SST

A3U016001001W01

01-60

<p>49 9200 020A</p> <p>V-ribbed belt tension gauge</p> 	<p>49 T012 0A0A</p> <p>Tappet holder set</p> 	<p>49 S120 710</p> <p>Coupling flange holder <FS></p> 
<p>49 E011 1A1</p> <p>Holder set <FS></p> 	<p>49 G011 103</p> <p>Bolts <FS></p> 	<p>49 B014 001</p> <p>Oil seal installer</p> 
<p>49 H010 401</p> <p>Oil seal installer <FS></p> 	<p>49 G033 107A</p> <p>Dust cover installer <FS></p> 	<p>49 E017 5A0</p> <p>Engine support set</p> 
<p>49 W033 105</p> <p>Oil seal installer <ZM></p> 	<p>49 G030 797</p> <p>Handle (Part of 49 G030 795) <ZM></p> 	<p>49 B010 001</p> <p>Oil seal installer <ZM></p> 
<p>49 T028 302</p> <p>Dust boot installer <ZM></p> 	<p>49 0187 280A</p> <p>Oil pressure gauge</p> 	<p>49 G014 001</p> <p>Oil filter wrench</p> 
<p>49 D011 102</p> <p>Crankshaft lock tool <ZM></p> 	<p>49 9200 145 (ATX) 49 D015 0A0 (MTX)</p> <p>Radiator cap tester adapter set</p> 	<p>49 L018 901</p> <p>Injector checker</p> 
<p>49 UN01 130</p> <p>104 Pin breakout box</p> 	<p>49 D015 004</p> <p>Box wrench</p> 	<p>49 N013 1A0B</p> <p>Fuel pressure gauge set</p> 

SERVICE TOOLS

<p>49 U014 001</p> <p>Air pressure tester</p> 	<p>MZ254AT3641</p> <p>Evaporative emission system tester</p> 	<p>49 B019 9A0</p> <p>System selector</p> 
<p>418FS475</p> <p>WDS</p> 