

SUSPENSION

02
SECTION

GENERAL PROCEDURES	02-10	REAR SUSPENSION	02-14
WHEEL ALIGNMENT	02-11	TECHNICAL DATA	02-50
FRONT SUSPENSION	02-13	SERVICE TOOLS	02-60

02-10

02-10 GENERAL PROCEDURES

PRECAUTION (SUSPENSION)	02-10-1	Power Steering Components	
Wheels and Tires		Removal/installation	02-10-1
Removal/installation	02-10-1		
Suspension Links			
Removal/installation	02-10-1		

PRECAUTION (SUSPENSION)

A3U021001013W01

Wheels and Tires Removal/installation

1. The removal and installation procedures for the wheels and tires are not mentioned in this section. When a wheel is removed, retighten it to **89—117 N·m {9—12 kgf·m, 66—86 ft·lbf}**.

Suspension Links Removal/installation

1. Tighten any part of the suspension that uses rubber bushings only after the vehicle has been lowered and unloaded.

Note

- Unloaded ... Fuel tank is full. Engine coolant and engine oil are at specified levels. Spare tire, jack and tools are in designated positions.

Power Steering Components Removal/installation

1. If any power steering fluid line has been disconnected anytime during the procedure, add ATF M-III or equivalent (e.g. Dexron® III), bleed the fluid line, and inspect for leakage after the procedure has been completed.