


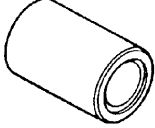
 
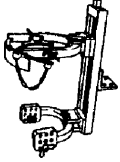

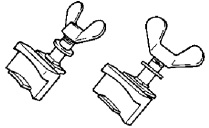
 
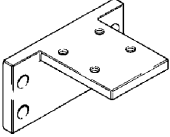
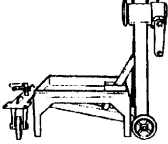
 
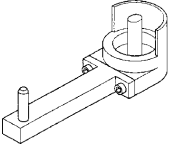

 
SERVICE TOOLS

02-60 SERVICE TOOLS

SUSPENSION SST 02-60-1

SUSPENSION SST

A3U026001013W01

<p>49 0180 510B</p> <p>Preload measuring attachment</p> 	<p>49 8038 785A</p> <p>Dust boot installer</p> 	<p>49 T034 1A0</p> <p>Coil spring compressor set</p> 
<p>49 T034 101</p> <p>Spring compressor (Part of 49 T034 1A0)</p> 	<p>49 T034 102</p> <p>Stand (Part of 49 T034 1A0)</p> 	<p>49 T034 103</p> <p>Hook (Part of 49 T034 1A0)</p> 
<p>49 T034 104</p> <p>Support (Part of 49 T034 1A0)</p> 	<p>49 T034 105</p> <p>Attachment</p> 	<p>49 0107 680A</p> <p>Engine stand</p> 
<p>49 B034 2A2</p> <p>Rubber bushing replacer set</p> 	<p>49 B034 211</p> <p>Rubber bushing installer</p> 	<p>49 B034 212</p> <p>Rubber bushing replacer</p> 
<p>49 G034 202</p> <p>Support block</p> 	<p>—</p>	<p>—</p>

02-60