

DRIVELINE/AXLE

03

SECTION

GENERAL PROCEDURES	03-10	DRIVE SHAFT	03-13
FRONT AXLE	03-11	TECHNICAL DATA	03-50
REAR AXLE	03-12	SERVICE TOOLS	03-60

03-10

03-10 GENERAL PROCEDURES

PRECAUTION (DRIVELINE/AXLE)	03-10-1	Suspension Arm	
Wheel and Tire Removal/Installation . .	03-10-1	Removal/Installation	03-10-1
Brake Line			
Disconnection/Connection	03-10-1		

PRECAUTION (DRIVELINE/AXLE)

A3U031001018W01

Wheel and Tire Removal/Installation

1. The removal and installation procedures for the wheels and tires are not mentioned in this section. When a wheel is removed, tighten it to **89—117 N·m {9.0—12.0 kgf·m, 65.1—86.7 ft·lbf}**.

Brake Line Disconnection/Connection

Caution

- **Brake fluid will damage painted surfaces. If brake fluid gets on a painted surface, wipe it off immediately.**

1. Tighten the brake pipe flare nut using the **SST** (49 0259 770B). Be sure to modify the brake pipe flare nut tightening torque to allow for use of a torque wrench-**SST** combination. (See 00-00-15 Torque Formulas.)
 - If any brake line has been disconnected any time during the procedure, add brake fluid, bleed the brakes, and inspect for leakage after the procedure has been completed.

Suspension Arm Removal/Installation

1. Tighten any part of the suspension that uses rubber bushings only after vehicle has been lowered and unloaded.

Note

- Unloaded ... Fuel tank is full. Engine coolant and engine oil are at specified level. Spare tire, jack, and tools are in designated position.