

05-16 MANUAL TRANSAXLE SHIFT MECHANISM

SHIFT MECHANISM

REMOVAL/INSTALLATION 05-16-2
