

# STEERING

**06**  
SECTION

**GENERAL PROCEDURES . . . . .06-10**  
**ENGINE SPEED SENSING**  
**POWER STEERING . . . . .06-12**

**TECHNICAL DATA . . . . . 06-50**  
**SERVICE TOOLS . . . . . 06-60**

## 06-10 GENERAL PROCEDURES

**PRECAUTION (STEERING) . . . . .06-10-1**  
Wheels and Tires  
Removal/Installation . . . . .06-10-1  
Power Steering Components  
Removal/Installation . . . . .06-10-1

Connectors  
Disconnection/Connection . . . . . 06-10-1

06-10

### PRECAUTION (STEERING)

A3U061001034W01

#### Wheels and Tires Removal/Installation

1. The removal and installation procedures for the wheels and tires are not mentioned in this section. When a wheel is removed, retighten it to **89—117 N·m {9.0—12.0 kgf·m, 65.1—86.7 ft·lbf}**.

#### Power Steering Components Removal/Installation

1. If any power steering fluid line has been disconnected anytime during the procedure, add ATF M-III or equivalent (e.g. Dexron<sup>®</sup> III), bleed the fluid lines, and inspect for leakage after the procedure has been completed.

#### Connectors Disconnection/Connection

1. Disconnect the negative battery cable before doing any work that requires handling of connectors. Reconnect the negative battery cable only after the work is completed.