

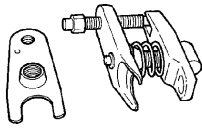
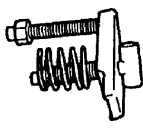

 
 

 

 
 
 
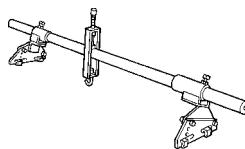


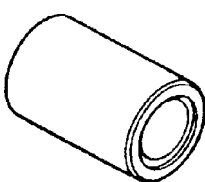
 
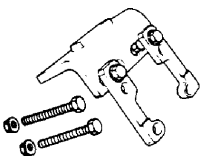

 
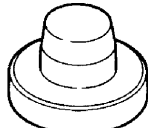

SERVICE TOOLS

06-60 SERVICE TOOLS

STEERING SST..... 06-60-1

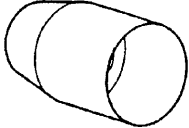
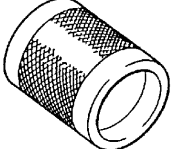
 

 
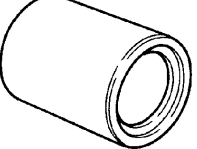
 

 
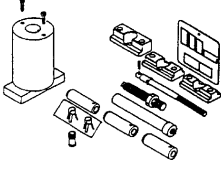
 


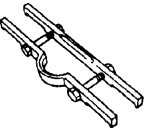
 
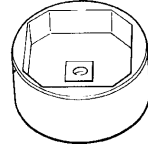
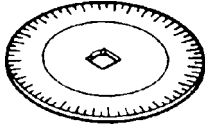
STEERING SST

A3U066001034W01

<p>49 T028 3A0</p> <p>Ball joint puller set</p> 	<p>49 T028 303</p> <p>Body (Part of 49 T028 3A0)</p> 	<p>49 T028 304</p> <p>Attachment (Part of 49 T028 3A0)</p> 
<p>49 1232 670B</p> <p>Power steering gauge set</p> 	<p>49 1232 672</p> <p>Gauge (Part of 49 1232 670B)</p> 	<p>49 1232 673</p> <p>Valve body (Part of 49 1232 670B)</p> 
<p>49 H002 671</p> <p>Adapter</p> 	<p>49 G032 3A4</p> <p>Power steering gauge adapter set</p> 	<p>49 G032 351</p> <p>Adapter (Part of 49 G032 3A4)</p> 
<p>49 G032 352</p> <p>Adapter (Part of 49 G032 3A4)</p> 	<p>49 G032 353</p> <p>Bolt (Part of 49 G032 3A4)</p> 	<p>49 E017 5A0</p> <p>Engine support</p> 
<p>49 B032 320</p> <p>Wrench</p> 	<p>49 B032 317</p> <p>Bearing & oil seal remover</p> 	<p>49 8038 785A</p> <p>Dust boot installer</p> 
<p>49 0180 510B</p> <p>Preload measuring attachment</p> 	<p>49 F032 301</p> <p>Power steering pump hanger</p> 	<p>49 B001 797</p> <p>Handle</p> 
<p>49 N032 320</p> <p>Oil seal installer</p> 	<p>49 B032 331</p> <p>Oil seal installer</p> 	<p>49 B032 323</p> <p>Rod seal remover body</p> 

06-60

SERVICE TOOLS

<p>49 E032 305</p> <p>Slipper seal protector</p> 	<p>49 E032 306</p> <p>Slipper seal former</p> 	<p>49 B032 325</p> <p>Rod seal guide</p> 
<p>49 B032 326</p> <p>Outer box protector</p> 	<p>49 B032 324</p> <p>Rod seal protector body</p> 	<p>49 T028 301</p> <p>Dust boot installer</p> 
<p>49 G032 3A1</p> <p>Joint hose set</p> 	<p>49 G032 317</p> <p>Hose (Part of 49 G032 3A1)</p> 	<p>49 B032 336</p> <p>Adapter set</p> 
<p>49 L011 0A0B</p> <p>Piston pin setting tool set</p> 	<p>49 L011 007</p> <p>Guide (Part of 49 L011 0A0B)</p> 	<p>49 G032 308</p> <p>Oil seal installer</p> 
<p>49 F032 303</p> <p>Handle</p> 	<p>49 N032 319A</p> <p>Support plate</p> 	<p>49 H032 338</p> <p>Joint shaft</p> 
<p>49 S032 317</p> <p>Socket wrench</p> 	<p>49 D032 316</p> <p>protoractor</p> 	<p>—</p>