

## **09-19 WIPER/WASHER SYSTEM**


<b>LOCATION INDEX</b> .....	<b>09-19-2</b>	<b>WINDSHIELD WASHER NOZZLE</b>	
Windshield Wiper and Washer System	09-19-2	<b>ADJUSTMENT</b> .....	09-19-10
Rear Wiper and Washer System	09-19-3	<b>WINDSHIELD WASHER NOZZLE</b>	
<b>WIPER/WASHER SYSTEMS</b>		<b>CLEANING</b> .....	09-19-11
<b>WIRING DIAGRAM</b> .....	09-19-4	<b>WINDSHIELD WASHER NOZZLE</b>	
<b>WINDSHIELD WIPER ARM AND BLADE</b>		<b>REMOVAL</b> .....	09-19-11
<b>ADJUSTMENT</b> .....	09-19-5	<b>WINDSHIELD WASHER NOZZLE</b>	
<b>WINDSHIELD WIPER ARM AND BLADE</b>		<b>INSTALLATION</b> .....	09-19-11
<b>REMOVAL/INSTALLATION</b> .....	09-19-5	<b>WINDSHIELD WASHER HOSE</b>	
Windshield Wiper Arm		<b>REMOVAL/INSTALLATION</b> .....	09-19-11
Installation Note	09-19-5	<b>REAR WIPER ARM AND BLADE</b>	
<b>WINDSHIELD WIPER LINK</b>		<b>ADJUSTMENT</b> .....	09-19-12
<b>REMOVAL/INSTALLATION</b> .....	09-19-5	<b>REAR WIPER ARM AND BLADE</b>	
<b>WINDSHIELD WIPER MOTOR</b>		<b>REMOVAL/INSTALLATION</b> .....	09-19-12
<b>REMOVAL/INSTALLATION</b> .....	09-19-6	Rear Wiper Arm Installation Note	09-19-12
<b>WINDSHIELD WIPER MOTOR</b>		<b>REAR WIPER MOTOR</b>	
<b>INSPECTION</b> .....	09-19-6	<b>REMOVAL/INSTALLATION</b> .....	09-19-12
<b>WASHER TANK</b>		<b>REAR WIPER MOTOR INSPECTION</b> ..	09-19-13
<b>REMOVAL/INSTALLATION</b> .....	09-19-7	<b>REAR WASHER MOTOR</b>	
<b>WINDSHIELD WASHER MOTOR</b>		<b>REMOVAL/INSTALLATION</b> .....	09-19-14
<b>REMOVAL/INSTALLATION</b> .....	09-19-7	<b>REAR WASHER MOTOR INSPECTION</b> .	09-19-14
<b>WINDSHIELD WASHER MOTOR</b>		<b>REAR WASHER NOZZLE</b>	
<b>INSPECTION</b> .....	09-19-8	<b>REMOVAL/INSTALLATION</b> .....	09-19-14
<b>WASHER FLUID-LEVEL SENSOR</b>		<b>REAR WASHER NOZZLE</b>	
<b>REMOVAL/INSTALLATION</b> .....	09-19-8	<b>ADJUSTMENT</b> .....	09-19-15
<b>WASHER FLUID-LEVEL SENSOR</b>		<b>REAR WASHER NOZZLE CLEANING</b> ..	09-19-15
<b>INSPECTION</b> .....	09-19-8	<b>REAR WASHER HOSE</b>	
<b>WIPER AND WASHER SWITCH</b>		<b>REMOVAL/INSTALLATION</b> .....	09-19-15
<b>REMOVAL/INSTALLATION</b> .....	09-19-9	<b>INTERMITTENT REAR WIPER RELAY</b>	
<b>WIPER AND WASHER SWITCH</b>		<b>REMOVAL/INSTALLATION</b> .....	09-19-16
<b>INSPECTION</b> .....	09-19-9	<b>INTERMITTENT REAR WIPER RELAY</b>	
Windshield Wiper and Washer	09-19-9	<b>INSPECTION</b> .....	09-19-16
Rear Wiper and Washer	09-19-10	Terminal Voltage Table (Reference)	09-19-16

# WIPER/WASHER SYSTEM

## LOCATION INDEX

A3U091901063W01

### Windshield Wiper and Washer System

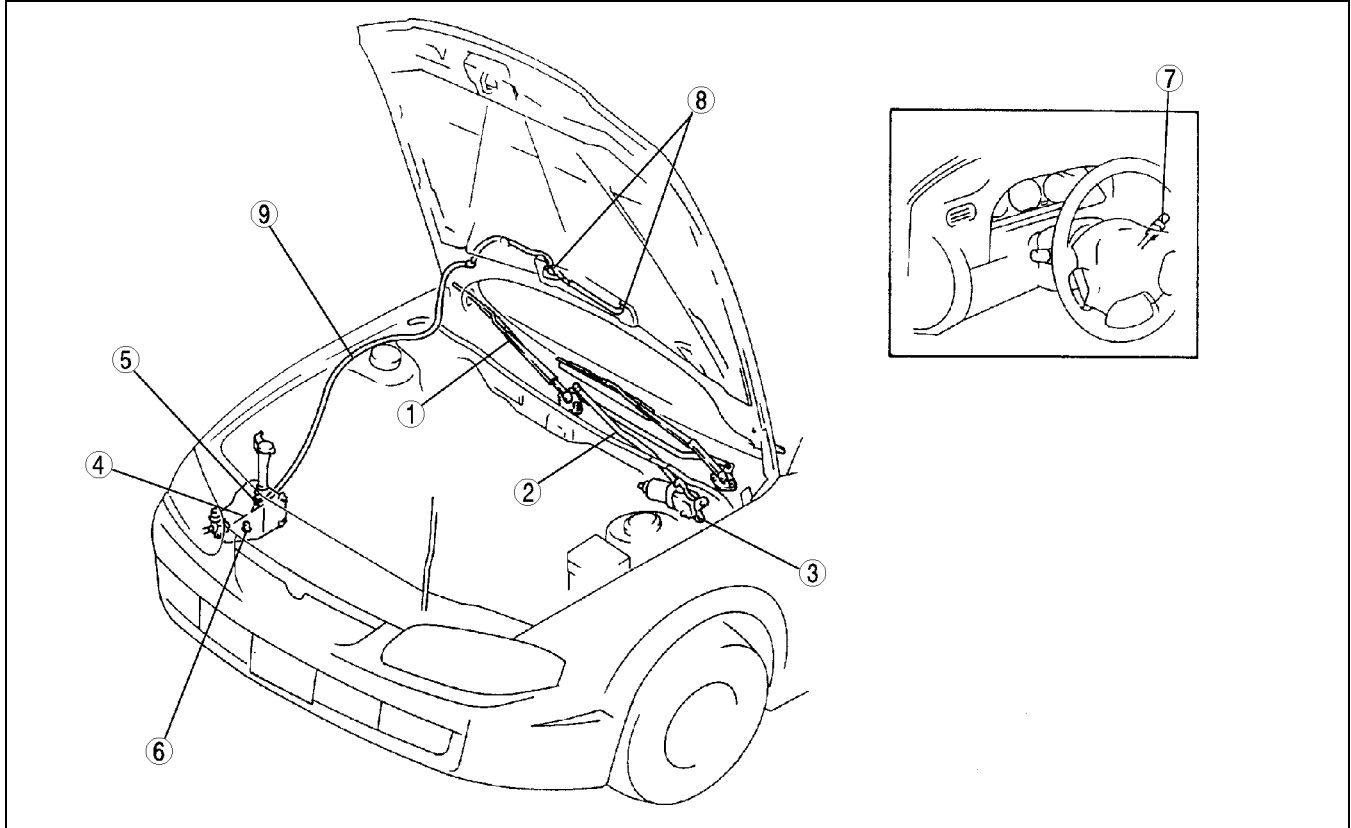


Z3U0919W003

1	Windshield wiper arm and blade (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT) (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION)
2	Windshield wiper link (See 09-19-5 WINDSHIELD WIPER LINK REMOVAL/INSTALLATION)
3	Windshield wiper motor (See 09-19-6 WINDSHIELD WIPER MOTOR REMOVAL/INSTALLATION) (See 09-19-6 WINDSHIELD WIPER MOTOR INSPECTION)
4	Washer tank (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION)
5	Windshield washer motor (See 09-19-7 WINDSHIELD WASHER MOTOR REMOVAL/INSTALLATION) (See 09-19-8 WINDSHIELD WASHER MOTOR INSPECTION)

6	Washer fluid-level sensor (See 09-19-8 WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION) (See 09-19-8 WASHER FLUID-LEVEL SENSOR INSPECTION)
7	Wiper and washer switch (See 09-19-9 WIPER AND WASHER SWITCH REMOVAL/INSTALLATION) (See 09-19-9 WIPER AND WASHER SWITCH INSPECTION)
8	Windshield washer nozzle (See 09-19-10 WINDSHIELD WASHER NOZZLE ADJUSTMENT) (See 09-19-11 WINDSHIELD WASHER NOZZLE CLEANING) (See 09-19-11 WINDSHIELD WASHER NOZZLE REMOVAL) (See 09-19-11 WINDSHIELD WASHER NOZZLE INSTALLATION)
9	Windshield washer hose (See 09-19-11 WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION)

# WIPER/WASHER SYSTEM

## Rear Wiper and Washer System

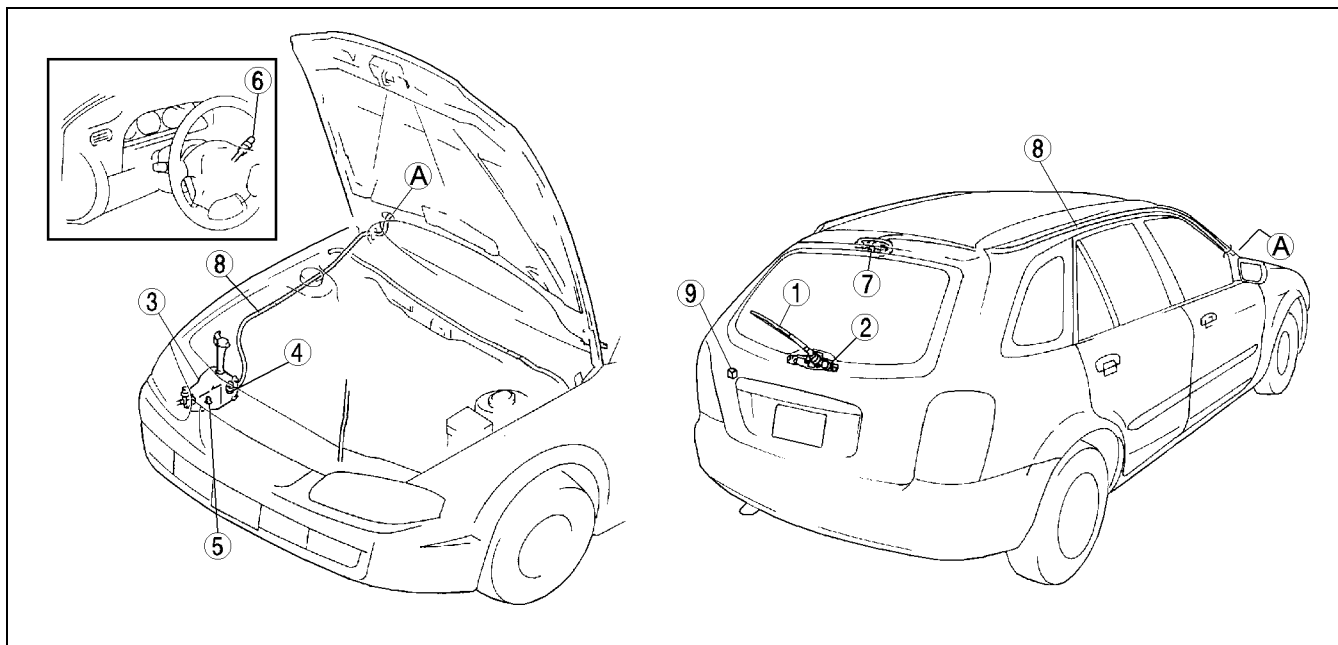

A3U0919W109

1	Rear wiper arm and blade (See 09-19-12 REAR WIPER ARM AND BLADE ADJUSTMENT) (See 09-19-12 REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION)
2	Rear wiper motor (See 09-19-12 REAR WIPER MOTOR REMOVAL/INSTALLATION) (See 09-19-13 REAR WIPER MOTOR INSPECTION)
3	Windshield washer tank (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION)
4	Rear washer motor (See 09-19-14 REAR WASHER MOTOR REMOVAL/INSTALLATION) (See 09-19-14 REAR WASHER MOTOR INSPECTION)
5	Washer fluid-level sensor (See 09-19-8 WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION) (See 09-19-8 WASHER FLUID-LEVEL SENSOR INSPECTION)

6	Wiper and washer switch (See 09-19-9 WIPER AND WASHER SWITCH REMOVAL/INSTALLATION) (See 09-19-9 WIPER AND WASHER SWITCH INSPECTION)
7	Rear washer nozzle (See 09-19-15 REAR WASHER NOZZLE ADJUSTMENT) (See 09-19-15 REAR WASHER NOZZLE CLEANING) (See 09-19-14 REAR WASHER NOZZLE REMOVAL/INSTALLATION)
8	Rear washer hose (See 09-19-15 REAR WASHER HOSE REMOVAL/INSTALLATION)
9	Intermittent rear wiper relay (See 09-19-16 INTERMITTENT REAR WIPER RELAY REMOVAL/INSTALLATION) (See 09-19-16 INTERMITTENT REAR WIPER RELAY INSPECTION)


09-19

# WIPER/WASHER SYSTEM


## WIPER/WASHER SYSTEMS WIRING DIAGRAM

A3U091901063W02

### WINDSHIELD WIPER AND WASHER SYSTEM

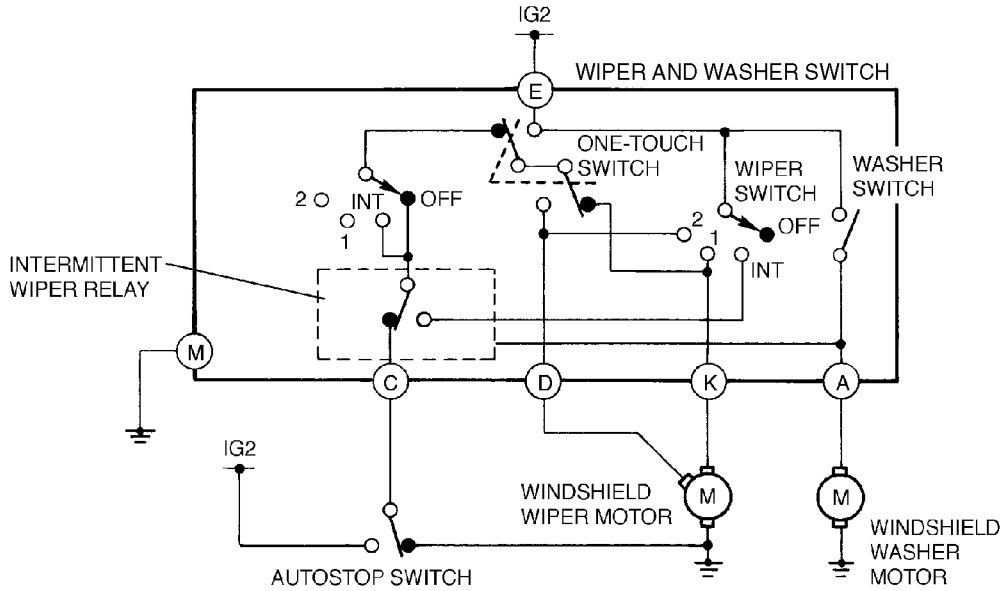

### REAR WIPER AND WASHER SYSTEM

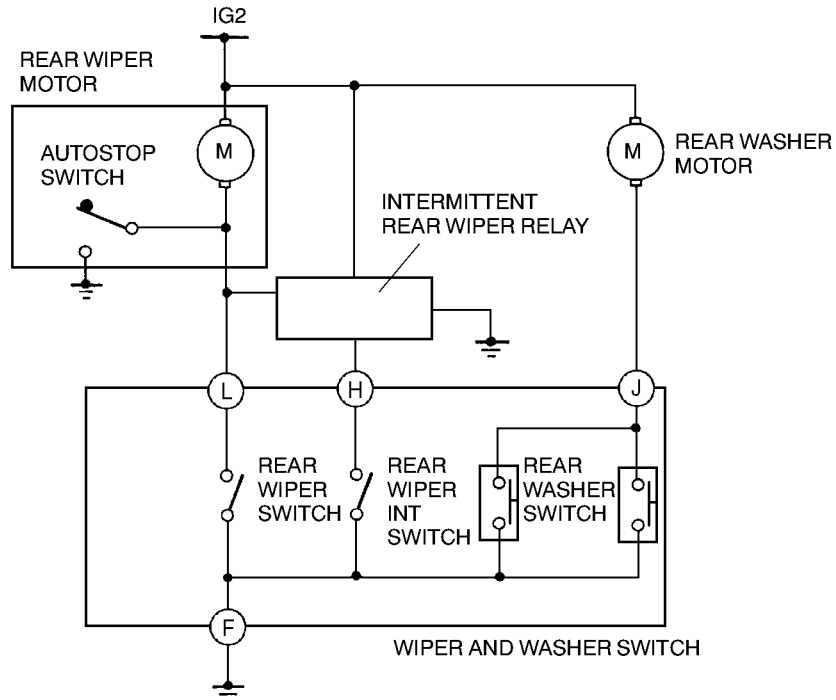


A3U0919W108

# WIPER/WASHER SYSTEM

## WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT

A3U091967320W01

1. Operate the windshield wiper motor to set the wipers in the park position.
2. Align the windshield wiper blades to the marks.

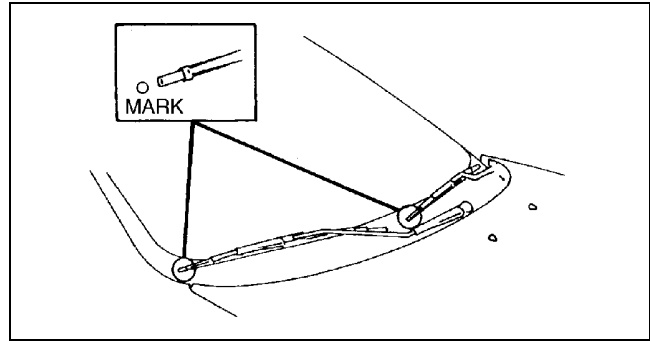

X3U919WA4


## WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION

A3U091967320W02

1. Remove in the order indicated in the table.

1	Cap
2	Nut
3	Windshield wiper arm (See 09-19-5 Windshield Wiper Arm Installation Note)
4	Windshield wiper blade
5	Rubber brush

2. Install in the reverse order of removal.
3. Adjust the windshield wiper arm and blade. (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.)

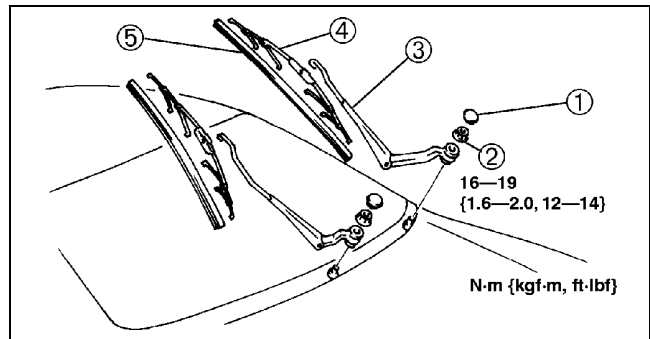


X3U919WA2

09-19

### Windshield Wiper Arm Installation Note

1. Clean the windshield wiper arm connector shafts using a wire brush before installing the windshield wiper arms.

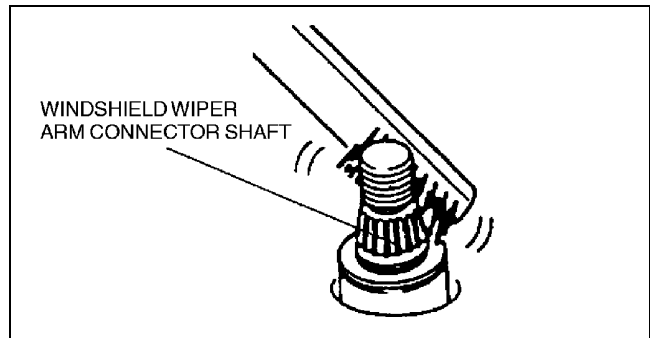

X3U919WA3


## WINDSHIELD WIPER LINK REMOVAL/INSTALLATION

A3U091967360W01

1. Remove the windshield wiper arm and blade. (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
2. Remove the cowl grille. (See 09-16-1 COWL GRILLE REMOVAL/INSTALLATION.)
3. Pry off the connection between the windshield wiper motor and windshield wiper link.
4. Remove in the order indicated in the table.

1	Bolt
2	Windshield wiper link

5. Install in the reverse order of removal.
6. Adjust the windshield wiper arm and blade. (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.)

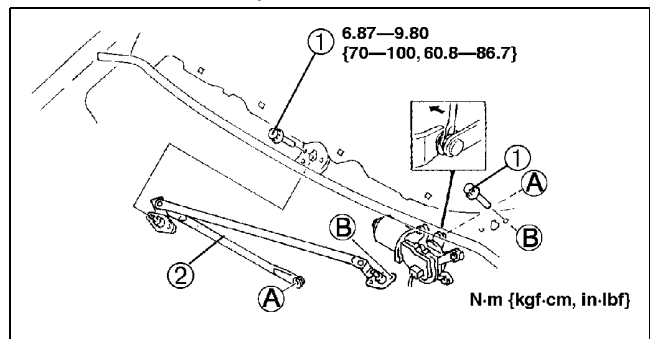

X3U919WA5

# WIPER/WASHER SYSTEM


## WINDSHIELD WIPER MOTOR REMOVAL/INSTALLATION

A3U091967340W01

1. Disconnect the negative battery cable.
2. Remove the windshield wiper arm and blade. (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
3. Remove the cowl grille. (See 09-16-1 COWL GRILLE REMOVAL/INSTALLATION.)
4. Pry off the connection between the windshield wiper motor and windshield wiper link.
5. Remove in the order indicated in the table.

1	Connector
2	Bolt
3	Windshield wiper motor

6. Install in the reverse order of removal.
7. Adjust the windshield wiper arm and blade. (See 09-19-5 WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.)

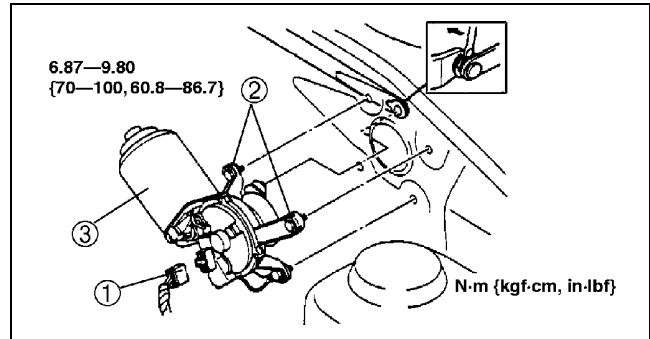

X3U919WA0


## WINDSHIELD WIPER MOTOR INSPECTION

A3U091967340W02

1. Disconnect the windshield wiper motor connector.
2. Connect battery positive voltage and inspect the operation of the windshield wiper motor as indicated below.

Terminal	Operation
A	High
C	Low

3. Disconnect battery positive voltage from terminal C of the motor while the wipers are operating.
4. Verify that the wipers do not stop in the park position.
5. Short between terminal B and C of the motor and connect battery positive voltage to terminal D of the motor.
6. Verify that the wipers operate at low speed again, then stop in the park position.
  - If not as specified, replace the windshield wiper motor.

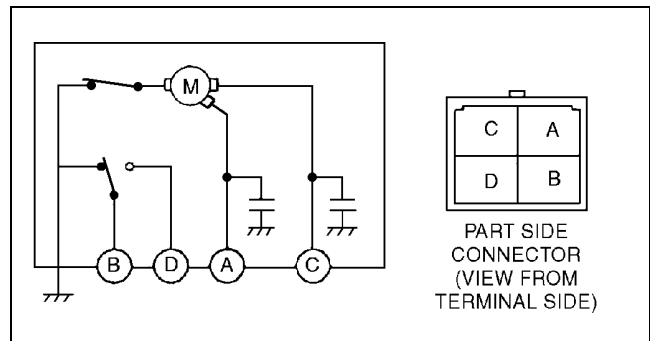


Z3U0919W001

# WIPER/WASHER SYSTEM

## WASHER TANK REMOVAL/INSTALLATION

A3U091967480W01

1. Disconnect the negative battery cable.
2. Partially peel off the right side mud guard.
3. Partially remove the right side front bumper (if equipped with washer fluid-level sensor). (See 09-10-5 FRONT BUMPER REMOVAL/INSTALLATION.)
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.

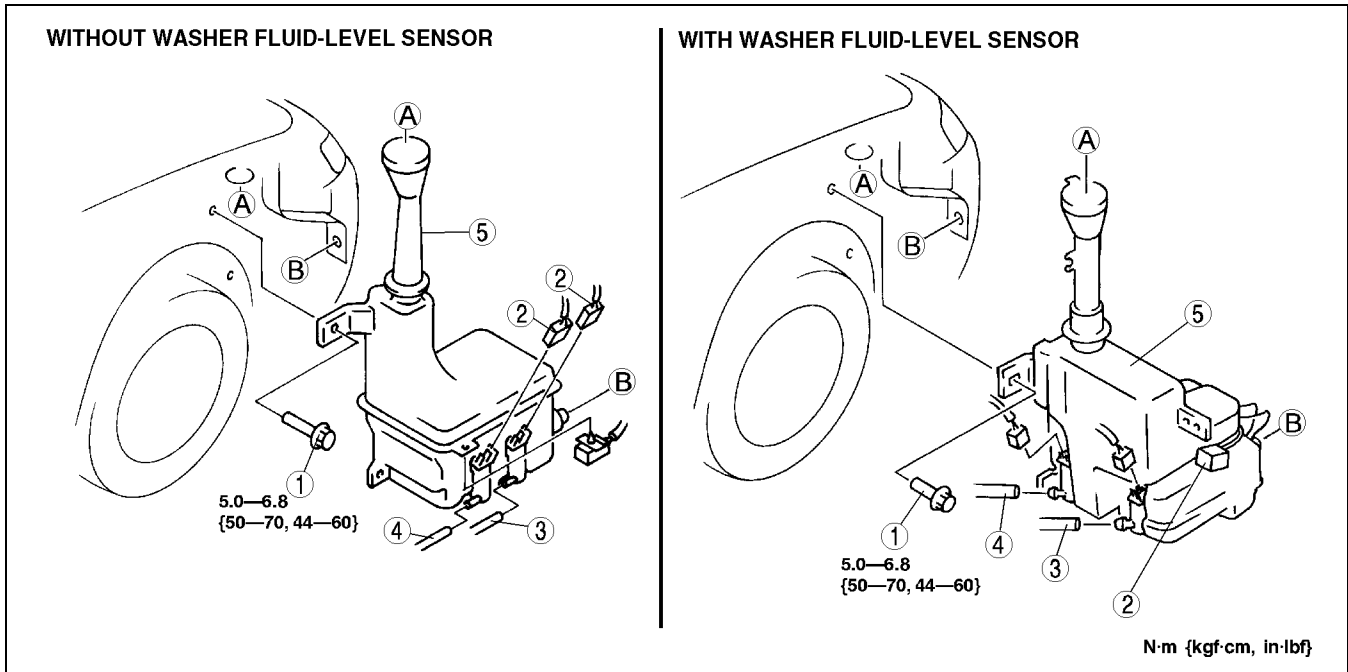

A3U0919W112

1	Bolt
2	Connector
3	Windshield washer hose

4	Rear washer hose
5	Washer tank

09-19


## WINDSHIELD WASHER MOTOR REMOVAL/INSTALLATION

A3U091976670W01

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION.)
3. Remove in the order indicated in the table.

1	Windshield washer motor
2	Grommet

4. Install in the reverse order of removal.

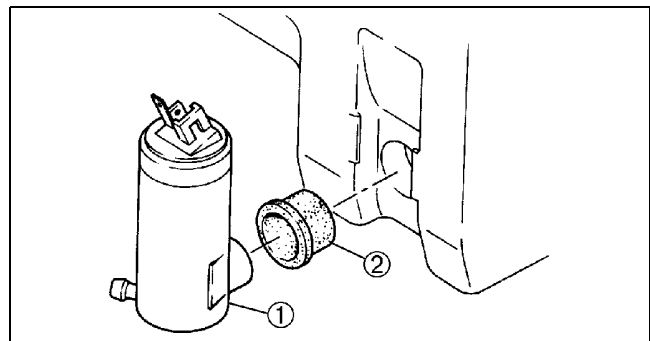


X3U919WA8

# WIPER/WASHER SYSTEM

## WINDSHIELD WASHER MOTOR INSPECTION

A3U091976670W02

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION.)
3. Connect battery positive voltage to the terminal B and ground to the terminal A of the motor.
4. Verify that the windshield washer motor operates.
  - If the motor does not operate, replace the windshield washer motor.

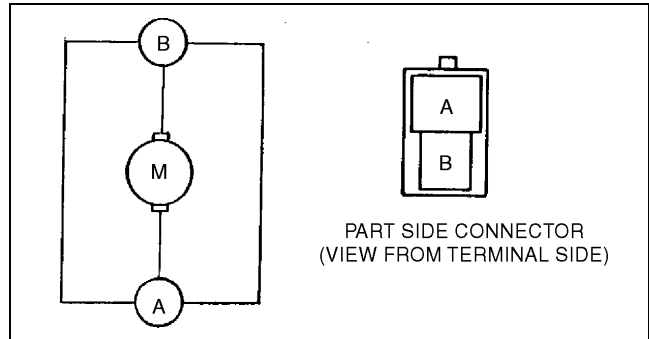

Y3U919WA3


## WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION

A3U091967488W01

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION.)
3. Remove in the order indicated in the table.

1	Washer fluid-level sensor
2	Grommet

4. Install in the reverse order of removal.

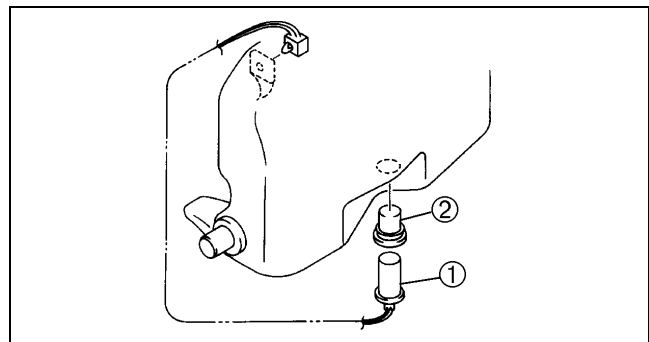

X3U919WB0

## WASHER FLUID-LEVEL SENSOR INSPECTION


A3U091967488W02

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION.)
3. Inspect for continuity between the washer fluid-level sensor terminals using an ohmmeter.
  - If not as specified, replace the washer fluid-level sensor.

○—○ : Continuity

Fluid level	Terminal	
	A	B
Above Low		
Below Low	○—○	○—○

X3U919WB1

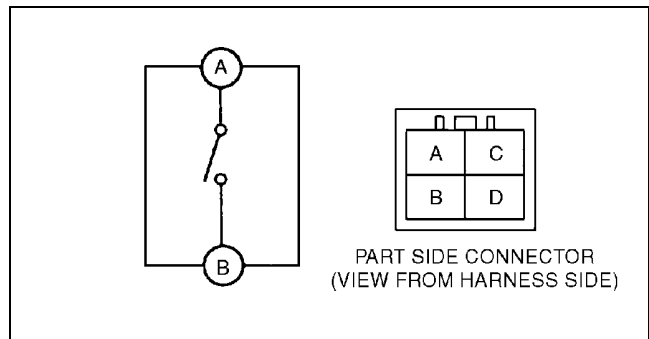

Y3U919WA4



# WIPER/WASHER SYSTEM


## WIPER AND WASHER SWITCH REMOVAL/INSTALLATION

A3U091966122W01

1. Disconnect the negative battery cable.
2. Remove the column cover. (See 09-17-5 COLUMN COVER REMOVAL/INSTALLATION.)
3. Remove in the order indicated in the table.

1	Connector
2	Screw
3	Wiper and washer switch

4. Install in the reverse order of removal.

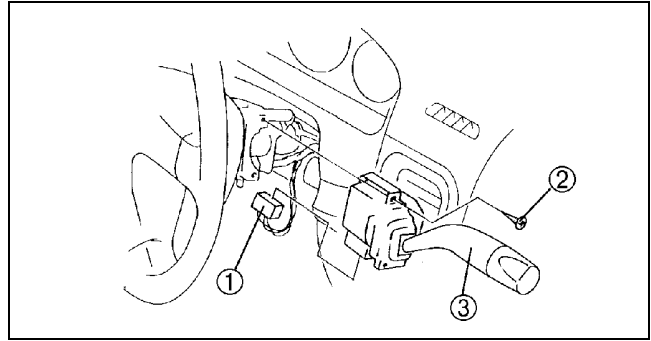

X3U919WB7

## WIPER AND WASHER SWITCH INSPECTION

A3U091966122W02


### Windshield Wiper and Washer

1. Disconnect the negative battery cable.
2. Remove the wiper and washer switch. (See 09-19-9 WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
3. Inspect for continuity between the wiper and washer switch terminals using an ohmmeter.
  - If not as specified, replace the wiper and washer switch.

○—○ : Continuity

Switch position		One-touch	Terminal				
			A	C	E	K	O
Wiper switch	OFF	OFF		○			○
		ON			○	○	
	INT		○			○	
	1				○	○	
	2				○	○	
Washer switch	ON		○		○		

X3U919WB8

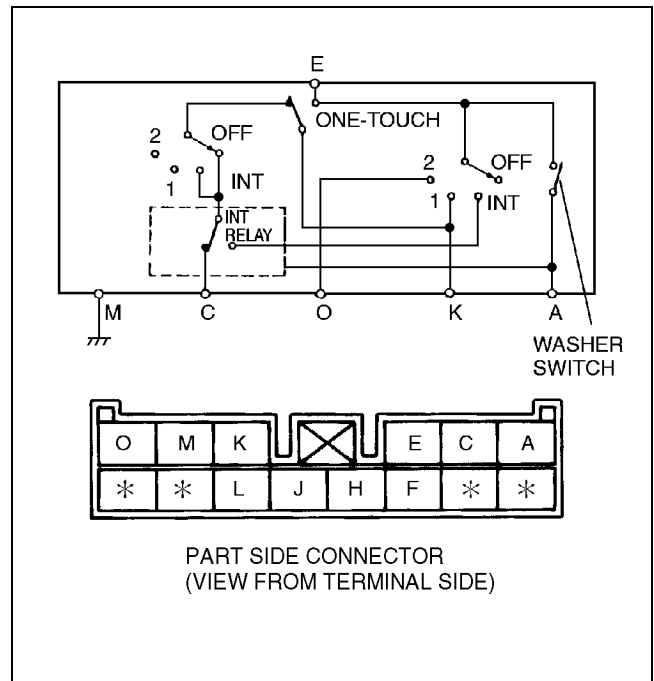

Y3U919WA5

# WIPER/WASHER SYSTEM


## Rear Wiper and Washer

1. Disconnect the negative battery cable.
2. Remove the wiper and washer switch. (See 09-19-9 WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
3. Inspect for continuity between the wiper and washer switch terminals using an ohmmeter.
  - If not as specified, replace the wiper and washer switch.

○—○ : Continuity

Switch position	Terminal			
	F	J	H	L
OFF				
Wiper	○—○			○—○
Washer	○—○	○—○		
Wiper and washer	○—○	○—○		○—○
Wiper INT	○—○		○—○	

A3U0919W017

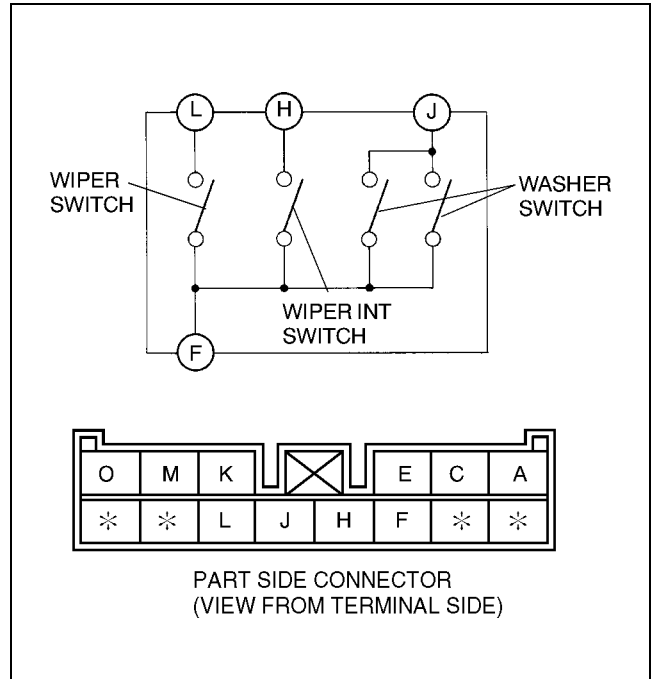


A3U0919W107

## WINDSHIELD WASHER NOZZLE ADJUSTMENT

1. Insert a needle or equivalent tool into the spray hole of the windshield washer nozzle and adjust the nozzle direction as shown.

A3U091967510W01

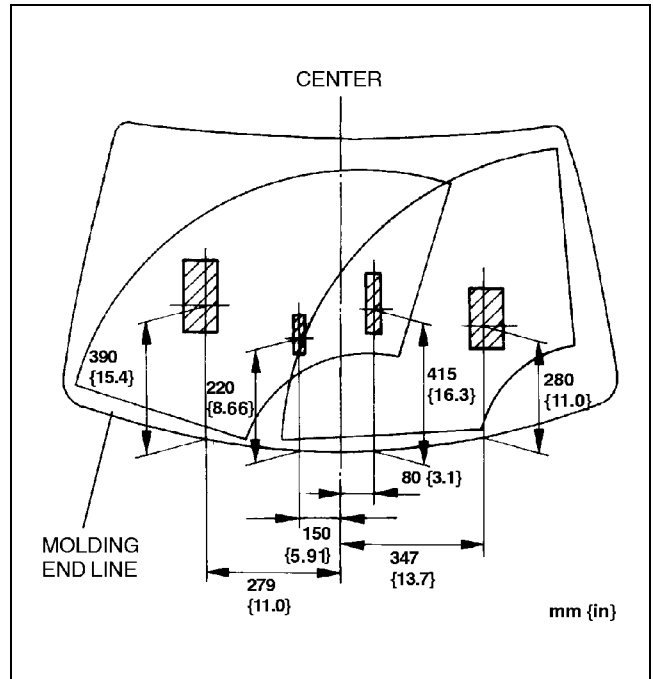


Y3U919WA6

# WIPER/WASHER SYSTEM

## WINDSHIELD WASHER NOZZLE CLEANING

A3U091967510W02

1. Clean the washer nozzle by inserting and moving a needle or similar tool back and forth.
  - If the nozzle becomes clogged again after cleaning, remove the hose from washer nozzle. Make sure there is enough washer fluid. Then turn the washer switch on and flush the inside of the hose.

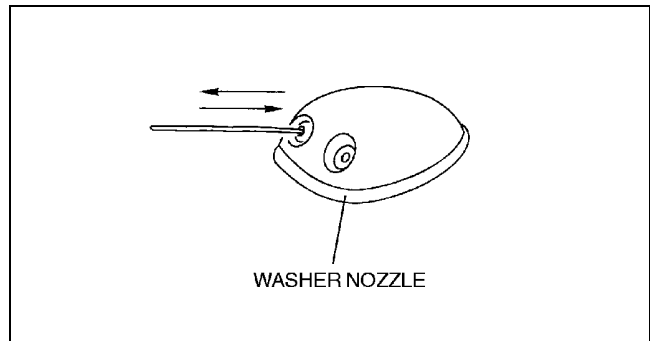


Y3U919WA7

## WINDSHIELD WASHER NOZZLE REMOVAL

A3U091967510W03

1. Remove the bonnet insulator.
2. Disconnect the windshield washer hose to windshield washer nozzle.
3. Remove the windshield washer nozzle using a **10 mm {0.4 in}** deep socket wrench from underneath the bonnet.

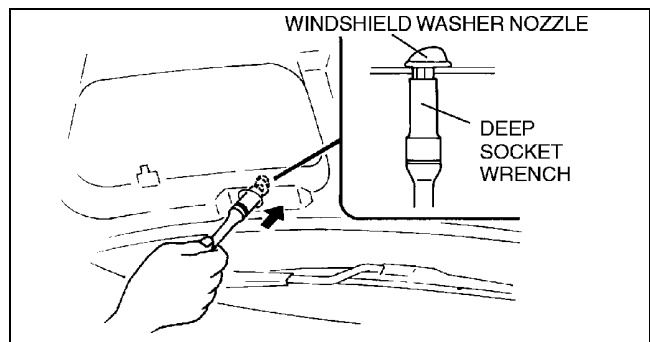

X3U919WB3

09-19

## WINDSHIELD WASHER NOZZLE INSTALLATION

A3U091967510W04

1. Connect the windshield washer hose to windshield washer nozzle.
2. Push the windshield washer nozzle into the installation hole.
3. Adjust the windshield washer nozzle. (See 09-19-10 WINDSHIELD WASHER NOZZLE ADJUSTMENT.)
4. Install the bonnet insulator.


## WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION

A3U091967500W01

1. Remove the bonnet insulator.
2. Partially peel off the right side mud guard.
3. Remove in the order indicated in the table.

1	Clip
2	Joint pipe
3	Windshield washer hose

4. Install in the reverse order of removal.

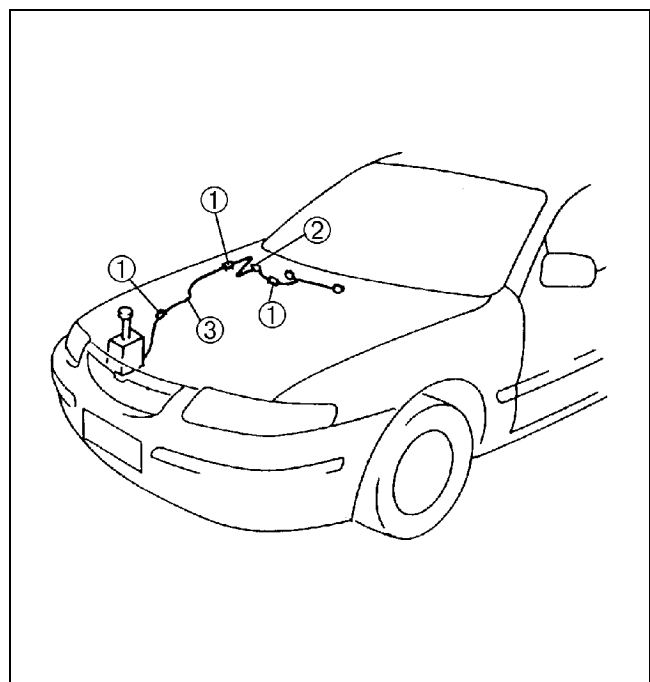


X3U919WB6

# WIPER/WASHER SYSTEM

## REAR WIPER ARM AND BLADE ADJUSTMENT

A3U091967420W01

1. Operate the rear wiper motor to set the wiper in the park position.
2. Set the rear wiper arm height as shown.

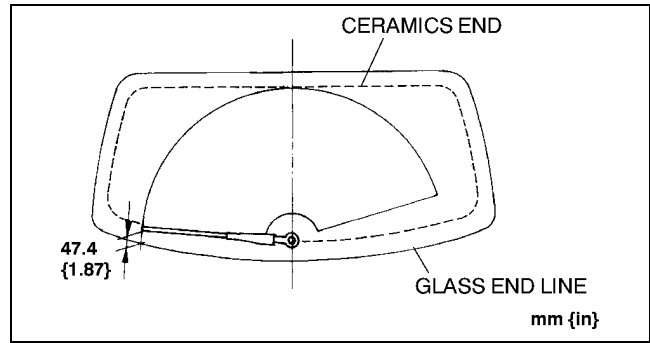

A3U0919W008


## REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION

A3U091967420W02

1. Remove in the order indicated in the table.

1	Nut
2	Rear wiper arm (See 09-19-12 Rear Wiper Arm Installation Note)
3	Rear wiper blade
4	Rubber brush


2. Install in the reverse order of removal.
3. Adjust the rear wiper arm and blade. (See 09-19-12 REAR WIPER ARM AND BLADE ADJUSTMENT.)

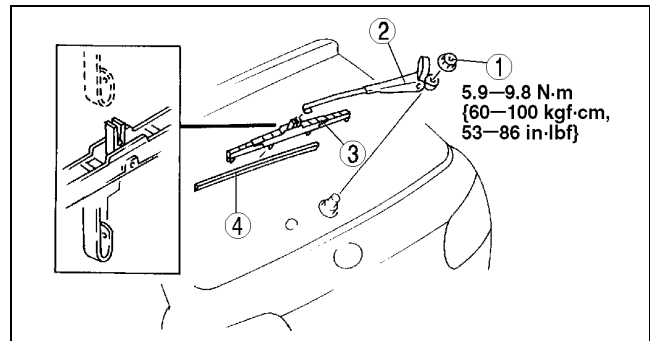

A3U0919W006

### Rear Wiper Arm Installation Note

1. Clean the rear wiper arm connector shaft using a wire brush before installing the rear wiper arm.

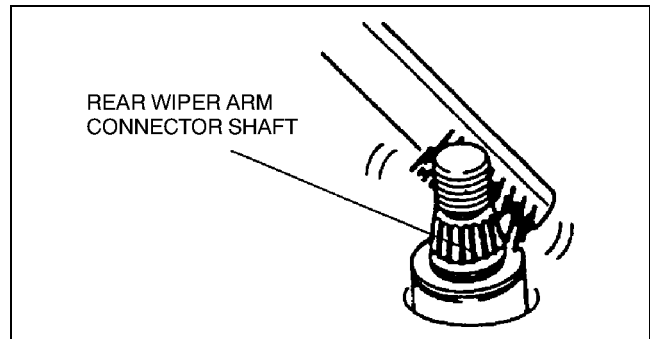


YMU919WAR

## REAR WIPER MOTOR REMOVAL/INSTALLATION

A3U091967450W01

1. Disconnect the negative battery cable.
2. Remove the rear wiper arm and blade. (See 09-19-12 REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
3. Remove the liftgate trim. (See 09-17-16 LIFTGATE TRIM REMOVAL/INSTALLATION.)
4. Remove in the order indicated in the table.

1	Connector
2	Seal cap
3	Nut
4	Washer
5	Outer bushing
6	Bolt
7	Rear wiper motor
8	Washer

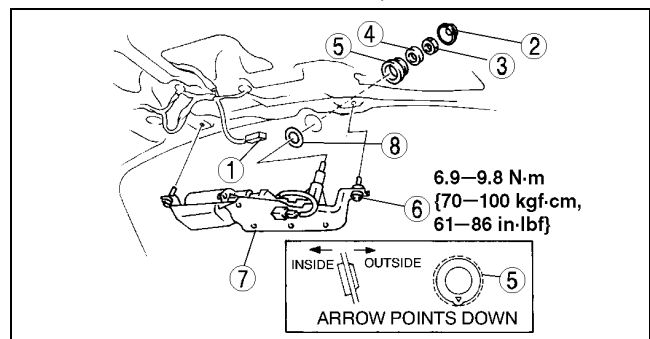

A3U0919W001


5. Install in the reverse order of removal.
6. Adjust the rear wiper arm and blade. (See 09-19-12 REAR WIPER ARM AND BLADE ADJUSTMENT.)

# WIPER/WASHER SYSTEM

## REAR WIPER MOTOR INSPECTION


A3U091967450W02

1. Disconnect the negative battery cable.
2. Remove the liftgate trim. (Refer to 09-17-16 LIFTGATE TRIM REMOVAL/INSTALLATION.)
3. Disconnect the rear wiper motor connector.
4. Connect battery positive voltage to the rear wiper motor terminal A and the ground to a bare metal part of the vehicle and the rear wiper motor terminal B.
5. Verify that the rear wiper motor operates.

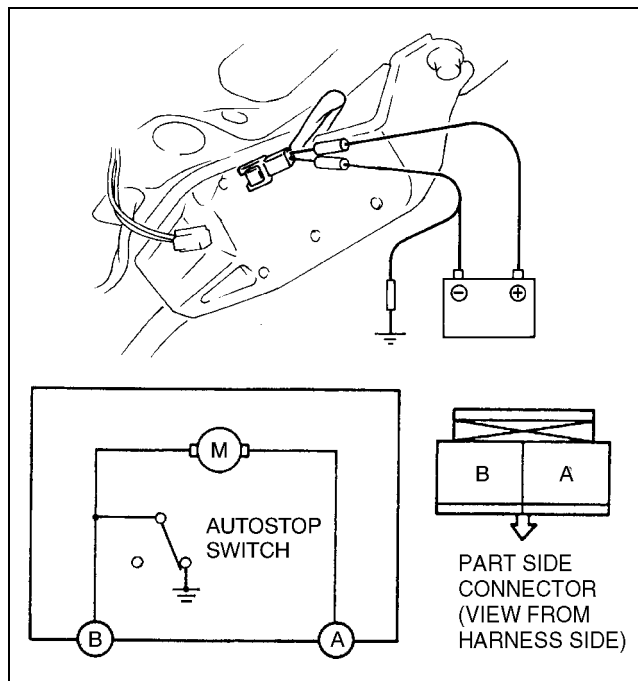

A3U0919W101

6. Disconnect the ground to the terminal B while the rear wiper is operating.
7. Verify that the rear wiper stops in the park position.
  - If not as specified, replace the rear wiper motor.

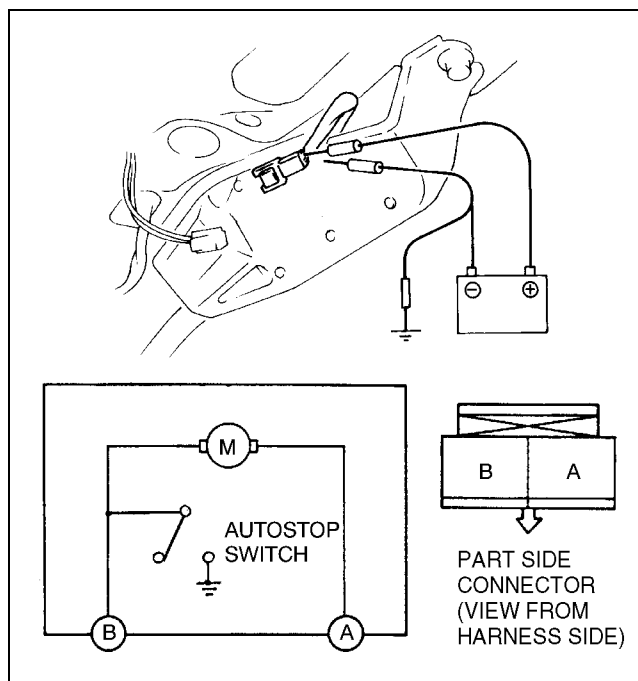

A3U0919W102

09-19

# WIPER/WASHER SYSTEM


## REAR WASHER MOTOR REMOVAL/INSTALLATION

A3U091976672W01

1. Disconnect the negative battery cable.
2. Partially peel off the right side mud guard.
3. Remove the washer tank. (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION.)
4. Remove in the order indicated in the table.

1	Rear washer motor
2	Grommet

5. Install in the reverse order of removal.

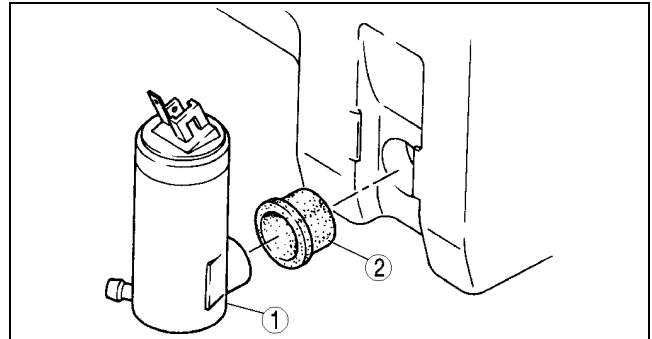


YMU919WAT

## REAR WASHER MOTOR INSPECTION

A3U091976672W02

1. Remove the washer tank. (See 09-19-7 WASHER TANK REMOVAL/INSTALLATION.)
2. Connect battery positive voltage to the terminal B and ground to the terminal A of the motor.
3. Verify that the rear washer motor operates.
  - If the motor does not operate, replace the rear washer motor.

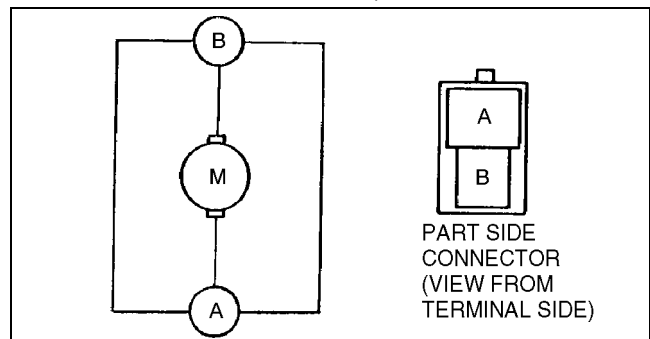


A3U0919W103

## REAR WASHER NOZZLE REMOVAL/INSTALLATION

A3U091967511W01

1. Disconnect the negative battery cable.
2. Remove the rear spoiler. (See 09-16-8 REAR SPOILER REMOVAL/INSTALLATION.)
3. Remove the rear washer hose from the rear washer nozzle.
4. Compress the hooks of the rear washer nozzle.
5. Pull the rear washer nozzle out to remove it.
6. Install in the reverse order of removal.
7. Adjust the rear washer nozzle. (See 09-19-15 REAR WASHER NOZZLE ADJUSTMENT.)

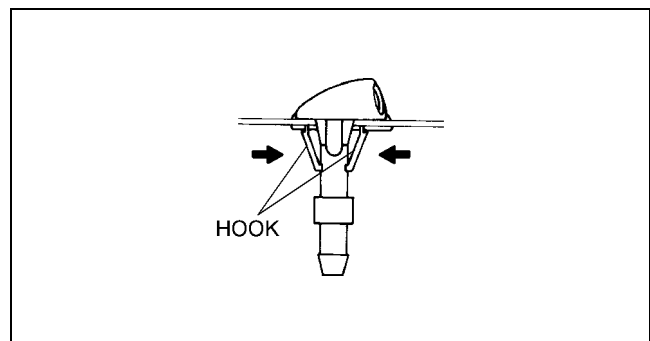


A3U0919W011

# WIPER/WASHER SYSTEM

## REAR WASHER NOZZLE ADJUSTMENT

A3U091967511W02

1. Insert a needle or equivalent tool into the spray hole of the rear washer nozzle and adjust the nozzle direction as shown.

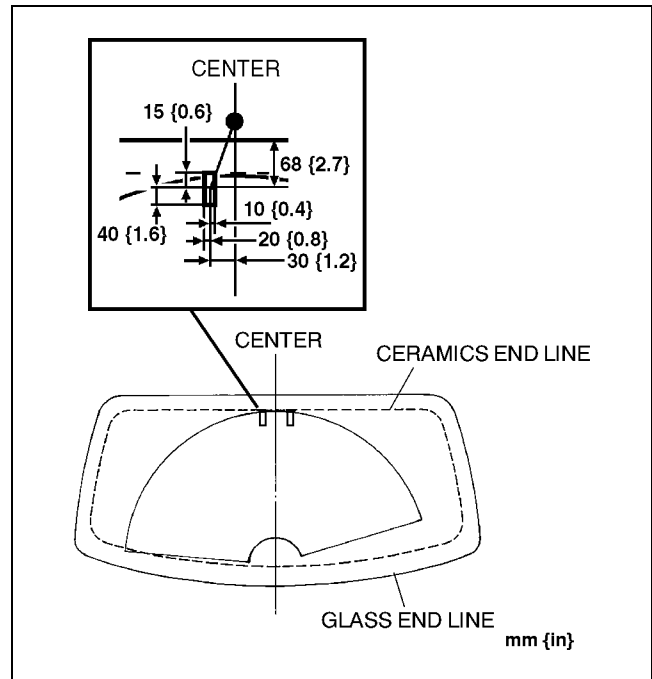

A3U0919W110

## REAR WASHER NOZZLE CLEANING


1. Clean the rear washer nozzle. (See 09-19-11 WINDSHIELD WASHER NOZZLE CLEANING.)

A3U091967511W03

## REAR WASHER HOSE REMOVAL/INSTALLATION


1. Disconnect the negative battery cable.
2. Remove the headliner. (See 09-17-16 HEADLINER REMOVAL/INSTALLATION.)
3. Remove the rear washer hose from the clips.
4. Partially peel off the right side mud guard and remove the rear washer hose from the clip.

A3U091967470W01

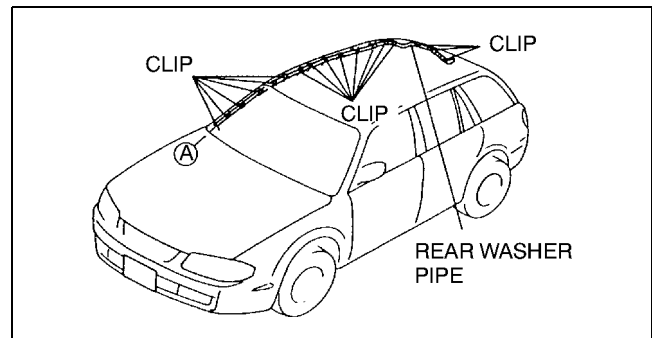

A3U0919W104

5. Remove the rear washer hose from the washer tank.
6. Install in the reverse order of removal.

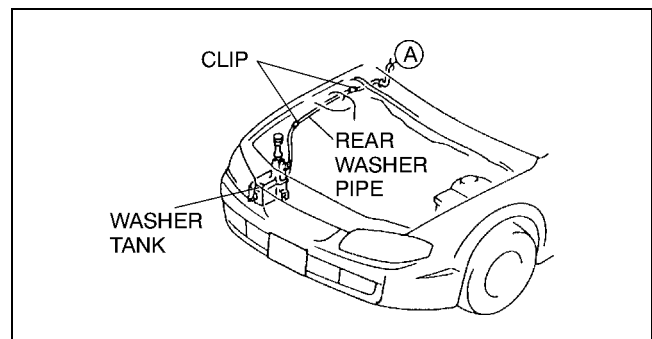

A3U0919W105

# WIPER/WASHER SYSTEM


## INTERMITTENT REAR WIPER RELAY REMOVAL/INSTALLATION

A3U091966810W01

1. Disconnect the negative battery cable.
2. Remove the left side trunk side trim. (See 09-17-15 TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
3. Remove in the order indicated in the table.

1	Nut
2	Connector
3	Intermittent rear wiper relay

4. Install in the reverse order of removal.

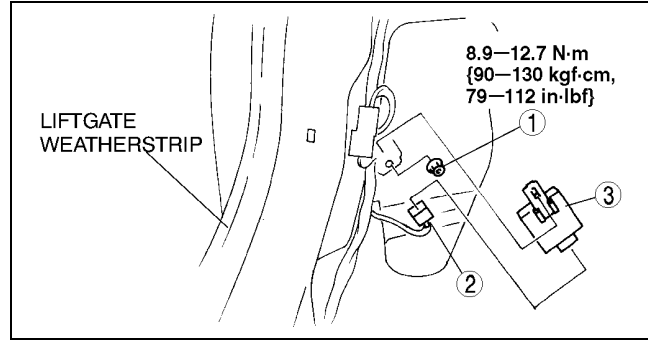

A3U0919W111

## INTERMITTENT REAR WIPER RELAY INSPECTION

A3U091966810W02

1. Measure the voltage at the intermittent rear wiper relay terminals as indicated below.
2. Disconnect the intermittent rear wiper relay connector before inspecting for continuity at the terminal H.
  - If not as specified, inspect the parts listed under "Action".
  - If the parts and wiring harnesses are okay but the system still does not work properly, replace the intermittent rear wiper relay.

### Terminal Voltage Table (Reference)

I		C	A
J	H F	D	B

HARNES SIDE CONNECTOR  
(VIEW FROM HARNES SIDE)

A3U0919W106

Terminal	Signal	Connected to	Test condition	Voltage (V)/ Continuity	Action
A	—	—	—	—	—
B	IG2	R. WIP 10 A fuse	Ignition switch at ON position	B+	<ul style="list-style-type: none"> <li>• Inspect R. WIP 10 A fuse</li> <li>• Inspect related harness</li> </ul>
			Other	Below 1.0	
C	—	—	—	—	—
D	—	—	—	—	—
F	Rear wiper switch INT	Rear wiper switch	Ignition switch at ON position	Below 1.0	<ul style="list-style-type: none"> <li>• Inspect R. WIP 10 A fuse</li> <li>• Inspect wiper and washer switch (See 09-19-9 WIPER AND WASHER SWITCH INSPECTION)</li> <li>• Inspect related harness</li> </ul>
			Rear wiper switch at OFF position	B+	
H	GND	GND	Under any condition: inspect for continuity to ground	Yes	<ul style="list-style-type: none"> <li>• Inspect GND</li> </ul>
I	—	—	—	—	—
J	Autostop	Rear wiper motor	Ignition switch at ON position	Rear wiper is operating (INT position) Alternates below 1.0 and B+	<ul style="list-style-type: none"> <li>• Inspect R. WIP 10 A fuse</li> <li>• Inspect wiper and washer switch (See 09-19-9 WIPER AND WASHER SWITCH INSPECTION)</li> <li>• Inspect rear wiper motor (See 09-19-13 REAR WIPER MOTOR INSPECTION)</li> <li>• Inspect related harness</li> </ul>
			Other	B+	