


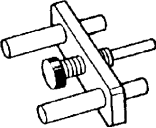
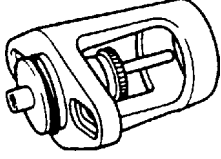




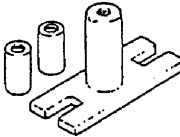
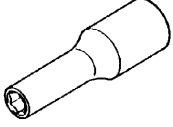
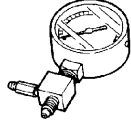
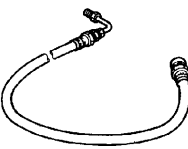
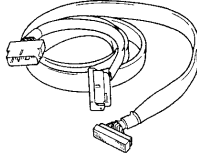

# SERVICE TOOLS

## 04-60 SERVICE TOOLS

**BRAKES SST** ..... 04-60-1

### BRAKES SST

A3U046001020W01

<p>49 0259 770B</p> <p>Flare nut wrench</p> 	<p>49 F043 001</p> <p>Adjust gauge</p> 	<p>49 B043 001</p> <p>Adjust gauge</p> 
<p>49 U043 0A0A</p> <p>Oil pressure gauge set</p> 	<p>49 0208 701A</p> <p>Boot air-out tool</p> 	<p>49 0221 600C</p> <p>Disc brake expand tool</p> 
<p>49 U043 005</p> <p>Joint (Part of 49 U043 0A0A)</p> 	<p>49 E043 003A</p> <p>Turning lock tool</p> 	<p>49 B043 004</p> <p>Socket wrench</p> 
<p>49 U043 004</p> <p>Oil pressure gauge (Part of 49 U043 0A0A)</p> 	<p>49 U043 006</p> <p>Hose (Part of 49 U043 0A0A)</p> 	<p>49 G066 001</p> <p>Adapter harness</p> 
<p>418FS475</p> <p>WDS</p> 	<p style="text-align: center;">—</p>	<p style="text-align: center;">—</p>

04-60